SCOSCHE

TA2078B

IN-DASH DOUBLE DIN STEREO INSTALLATION KIT FOR 2003-08 TOYOTA COROLLA

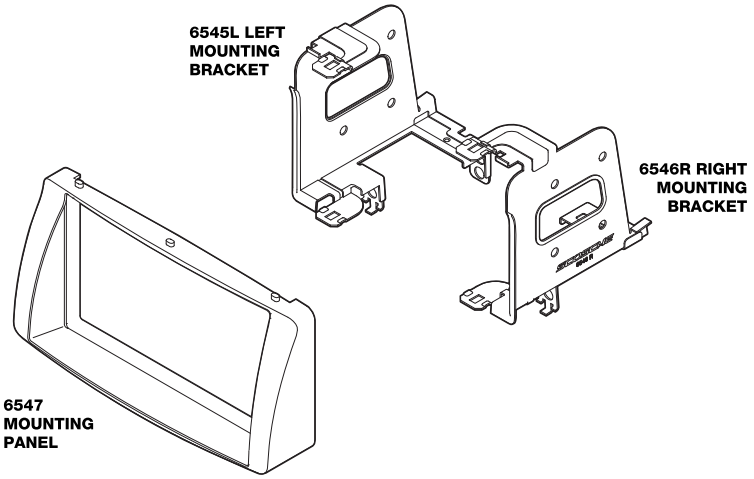

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2003-08 Toyota Corolla vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

TA02B
1987-Up Toyota

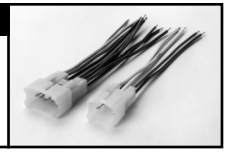

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (TA2078B) in 2003-08 Toyota Corolla vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2008 SCOSCHE INDUSTRIES, INC.

SI 2/08 TA2078B (3000003)

FACTORY STEREO REMOVAL

2003-08 TOYOTA COROLLA

1. Remove shifter bezel.
2. Remove center knob in climate control and extract (1) Phillips head screw.
3. Use fingers to remove climate control panel and pockets.
4. Extract (4) 10mm bolts from stereo brackets. Pull away stereo unit, disconnect and remove.

MOUNTING THE STEREO

DOUBLE DIN-ISO MOUNT

1. Using ISO mounting screws supplied with the aftermarket stereo (or reusing factory radio stereo screws), mount 6545 & 6546 brackets to the aftermarket stereo.
2. Snap 6547 panel into the factory vent bezel that surrounding the factory stereo.
3. Snap the factory vent assembly onto 6545 & 6546 upper and lower bracket tabs.

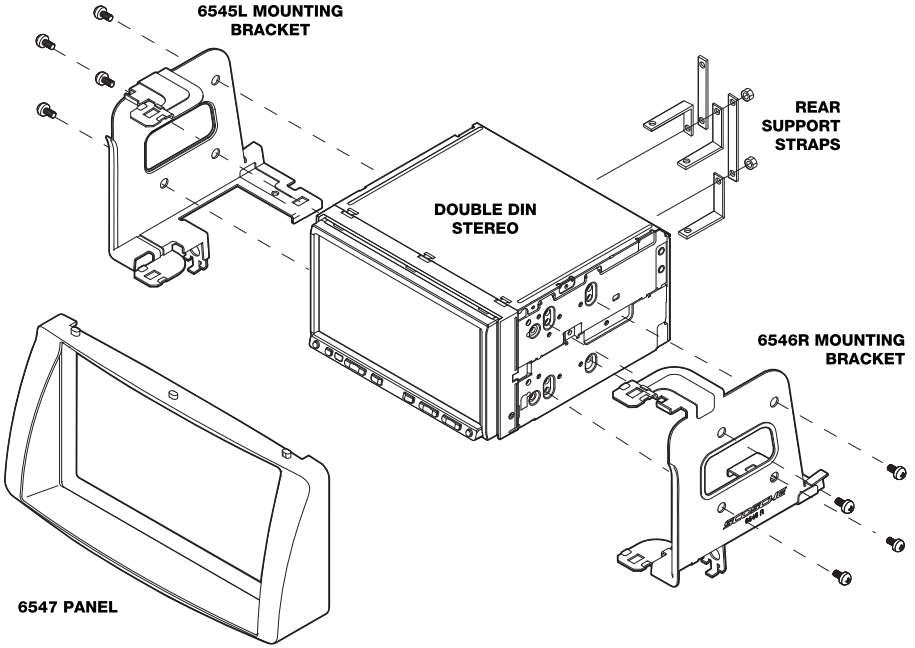

NOTE:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.